

# DVD Drive Replacement Instructions

Be sure to follow the instructions in this sheet carefully. Failure to follow these instructions could result in damage to your equipment and may void your warranty.

Replacing the DVD drive requires five basic steps:

- Ensure the DVD drive is empty.
- Turn off the computer or put it in sleep mode.
- Open the expansion bay.
- Remove the installed DVD-ROM drive module.
- Insert the replacement DVD-ROM drive module.

**Note:** A video version of the replacement instructions is available at <http://www.info.apple.com/installparts>

## Tools Required

No tools are required for this procedure.

## Replacing the DVD Drive


PowerBook DVD drives are removed and inserted the same way as expansion bay modules.

Your PowerBook comes with a dual-function expansion bay (on the right side of the computer) that accepts either expansion bay modules such as the DVD drive or a PowerBook battery.

1. If a disc is inserted in the DVD drive tray, remove it by dragging the disc icon to the Trash.

If you are unable to eject a disc by dragging its icon to the Trash, quit any applications that may be using the disc. If that does not work, use the end of a pen to gently press the manual eject button.

2. Shut down your computer or put it in sleep mode.
3. Place your PowerBook on a hard, flat surface and pull the expansion bay release lever toward you to release the expansion bay.

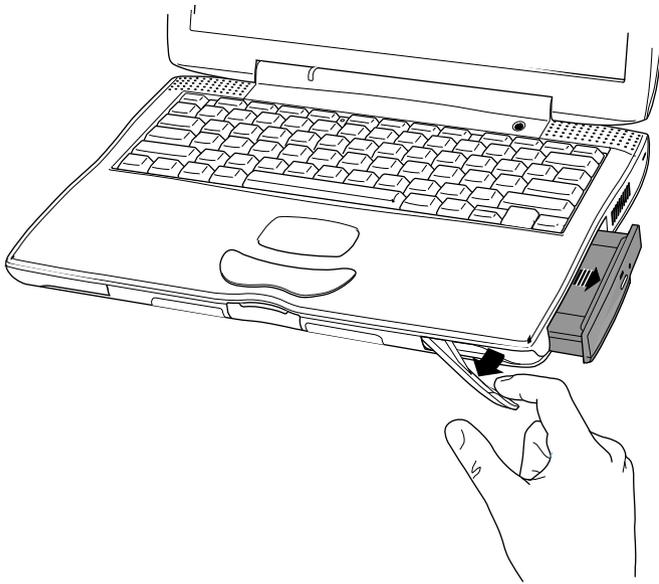

4. Insert the DVD-ROM drive module into the expansion bay.

### For More Information on Your DVD Drive

For instructions on using Apple DVD player, open the player and then choose Apple DVD Player Help from the Help menu.

Additional information on using CD or DVD discs is available in Mac Help. Choose Mac Help from the Help menu and search for “discs.”

---

** Apple Computer, Inc.**

© 2000 Apple Computer, Inc. All rights reserved.

Under the copyright laws, this document may not be copied, in whole or in part, without the written consent of Apple.

The Apple logo is a trademark of Apple Computer, Inc., registered in the U.S. and other countries. Use of the “keyboard” Apple logo (Option-Shift-K) for commercial purposes without the prior written consent of Apple may constitute trademark infringement and unfair competition in violation of federal and state laws.

Every effort has been made to ensure that the information in this document is accurate. Apple is not responsible for printing or clerical errors.

Apple Computer, Inc.  
1 Infinite Loop  
Cupertino, CA 95014-2084  
408-996-1010  
<http://www.apple.com>

Apple, the Apple logo, FireWire, and PowerBook are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.