

**To disconnect or unhook your OWC Mercury Pro hard drive, follow these important steps to properly dismount your drive.**

**Windows Systems (all versions):** If you wish to disconnect your OWC Mercury Pro drive without shutting down your computer, you need to stop the device with the "Unplug or Eject Hardware" icon, located on the right side of the system tray. Your drive is now safe to power off and unhook.

**Macintosh Systems (all versions):** If you wish to disconnect your OWC Mercury Pro drive without shutting down your computer, simply drag the OWC Mercury Pro drive icon to the trash can on the desktop (or, in the dock using Mac OS X). Your drive is now safe to power off and unhook.

---

**Prosoft Data Backup (Mac) or NovaStor NovaBACKUP(PC)**

To install and use the included backup software, please insert the CD and follow the included installation and operation instructions on the CD.

---

**Share your Mac formatted drive with your PC using MacDrive (optional purchase)**

After installing MacDrive, your HFS+ Macintosh volume will mount as if the drive were formatted in a native Windows format. MacDrive allows you to use your OWC Mercury Pro hard drive on either platform without having to reformat or re-initialize the volume. We highly recommend this software for anyone that is sharing data in a cross platform environment.

---

**Reformatting your OWC Mercury Pro Hard Drive**

To reformat or re-initialize your OWC Mercury Pro hard drive, visit our tech center for directions using the OS you wish to format the drive with.

[http://eshop.macsales.com/tech\\_center/fw HDD.cfm](http://eshop.macsales.com/tech_center/fw HDD.cfm)

---

**Notes for use with older Macintosh systems**

If you are using an older Macintosh system, or using a PCI FireWire card to interface with the OWC Mercury Pro FireWire drive, we recommend using the included Intech Hard Disk SpeedTools to tune the drive for optimum performance. Transfer errors or corruption can be avoided by using this software. This is especially recommended if you are NOT using Mac OS X.

---

**Using the 6 Pin FireWire Port on the OWC Mercury Pro FireWire 800**

We recommend that you only use the 6 pin FireWire port to connect FireWire 400 devices (daisy chain), not with 6 pin to 9 pin FireWire converter cables. It is always faster to connect devices to their native ports on the computer, and using this port for any connectivity other than as recommended will be detrimental to the speed the device operates at.



**OWCMANME8F**

Copyright ©2003 Other World Computing All Rights Reserved.

Other World Computing's 2 year Limited Warranty is not transferrable and subject to limitations.



**OWC Mercury Elite Pro FireWire 800  
Owner's Manual**

We thank you for your purchase of your new OWC Mercury Elite Pro FireWire 800 hard drive and are happy to provide you with one of the newest, fastest, and easiest ways to add mass storage to your computer!

For more information about FireWire 400, 800 and USB 2.0 please visit our tech center at [http://eshop.macsales.com/tech\\_center/index.cfm](http://eshop.macsales.com/tech_center/index.cfm)

Before starting, if your new OWC Mercury Elite Pro Hard Drive is delivered under extreme hot or cold conditions, you should allow the contents of the package to reach room temperature prior to use.

Treat your new OWC Mercury product just like you do your computer - keep it dry, out of direct sunlight, clean, and avoid static electricity.

## Installation / Setup Instructions

### Macintosh Software Installation:

**Mac OS X - FireWire 400, 800 or USB 2.0:** - Drivers not required. Proceed to hardware installation.

**Mac OS 8.6-9.2.2 - FireWire 400:** Insert the HDST CD and follow the instructions provided by the installer. You may need to install Apple's FireWire drivers, see the OWC tech center for details. **Mac OS 8.6-9.2.2 does not support FireWire 800.**

**Mac OS 8.6-9.2.2 - USB 1.1:** You will need to download USB Mass Storage Support from Apple at: <http://docs.info.apple.com/article.html?artnum=60394>

**Mac OS 8.6-9.2.2 does not support USB 2.0.**

### Windows Software Installation:

**Windows - 98 & ME - FireWire 400:** Drivers not required. For use with Windows 98SE or ME, it may be necessary to select the drive in the device manager and specify it as a removable drive. Windows 2000/XP users will have to create a signature for the drive in the Computer Management control panel. **Windows 98 and ME do not support FireWire 800.**


**Windows - 2000 & XP - FireWire 400 or 800:** Drivers not required. Proceed to hardware installation.

**Windows - ME & Higher - USB 2.0/1.1:** Drivers not required. The same Windows 98 & ME notes for FireWire apply for removable drives.

Unpack your new OWC Mercury Elite Pro FW800 hard drive and examine it's contents.



Familiarize yourself with the connections on the back of the OWC Mercury Elite Pro hard drive - you will need to use these to connect your new drive to your computer.

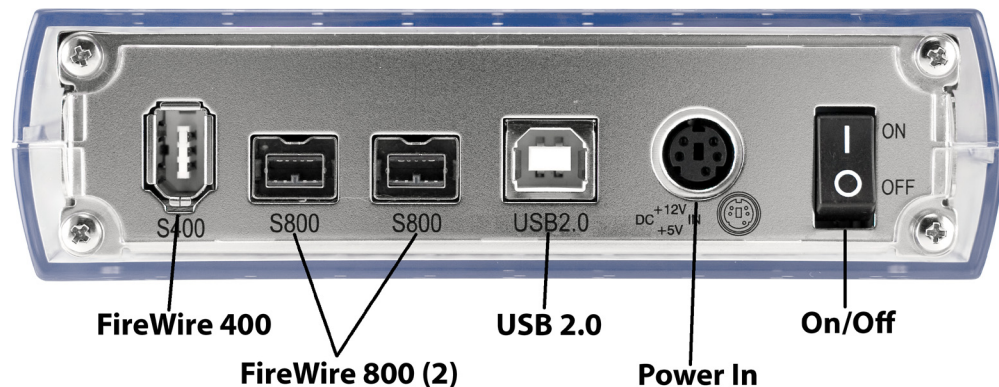

### Hardware Installation:

**Installation of the hardware is simple on any platform.**

1. Plug the AC power cord into the wall and to the DC transformer.
2. Plug the DC power cord into the OWC Mercury Pro Drive.
3. Connect the FireWire 400, FireWire 800, or USB cable - appropriate for the interface your computer supports, into the drive and computer. Only connect ONE cable.
4. Power on the OWC Mercury Elite Pro FW800! You're all set!

**Note:** You may only have one computer directly connected to the drive at a time. When using FireWire, the additional FireWire ports on the drive may be used to interconnect additional FireWire devices.

**Note:** If you are using FireWire 800 and add a FireWire 400 device to the chain, all devices will be reduced to FireWire 400 performance.