Dantz Retrospect Express

To install and use the included Dantz Retrospect Express backup software, please insert the CD and follow the included installation and operation instructions on the CD.









Welcome to the world of recordable media, brought to you by **Other World Computing!**

We thank you for your purchase of your new OWC Mercury Removable FireWire/USB 2.0 drive and are happy to provide you with one of the newest, fastest, and easiest ways to add mass storage to your computer.

For more information, please visit our tech center at http://eshop.macsales.com/Tech/index.cfm

Installation / Setup Instructions

Before starting, if your new OWC Mercury Removable Drive is delivered under extreme hot or cold conditions, you should allow the contents of the package to reach room temperature prior to use.

Treat your new OWC Mercury product just like you do your computer - keep it dry, out of direct sunlight, clean, and avoid static electricity.

Macintosh Software Installation:

Mac OS 9.1-X: Install the included software, following the on screen directions.

Reboot and proceed to hardware installation.

Windows Software Installation:

Windows - 98SE & Higher: Software not required for installation. Movie creation & burning software for DVDs & CDs is available separately here:

http://eshop.macsales.com/Catalog_Page.cfm?Parent = 455&Title=Media&Template=

General Usage Tips

If your OWC Mercury CD-RW or DVD-RW does not show up using the recording software or the Apple System Profiler, you may need to install FireWire Drivers. For more information about this, visit the tech center for details.

http://eshop.macsales.com/Tech/index.cfm

Unpack your new OWC Mercury drive and examine it's contents.



Not pictured is blank CD-R or DVD-R media.

Familiarize yourself with the connections on the back of the OWC Mercury drive - you will need to use these to connect your new drive to your computer.



Hardware Installation:

- 1. Plug the AC power cord into the wall and to the DC transformer.
- 2. Plug the DC cord into the removable drive.
- 3. Plug the FireWire or USB cable into the removable drive.
- 4. Plug the FireWire or USB cable into the computer's FireWire or USB 2.0 port.

(You may only use one port at a time, FireWire or USB 2.0)

5. Power on the OWC Mercury Removable! You're all set!