


# USB-C Dock with HDMI: Firmware Upgrade Instructions

OWC strongly recommends using a Boot Camp partition with Windows 10 installed (or a Windows 10 PC) for this upgrade process. Here are the steps:

1. Download the .zip file from the product page (Specs > Product Drivers).
2. Extract the .zip file.
3. Find the file named OWCTCDOCK11P\_2017-03-20\_Firmware and double-click it. The firmware upgrade tool will appear (shown below).
4. Connect the power supply to the USB-C Dock, then connect the dock to the host computer. Make sure no other devices are connected to the dock.
5. Once the host computer detects the USB-C Dock, installer window will display the device version (shown near the left edge of the window).

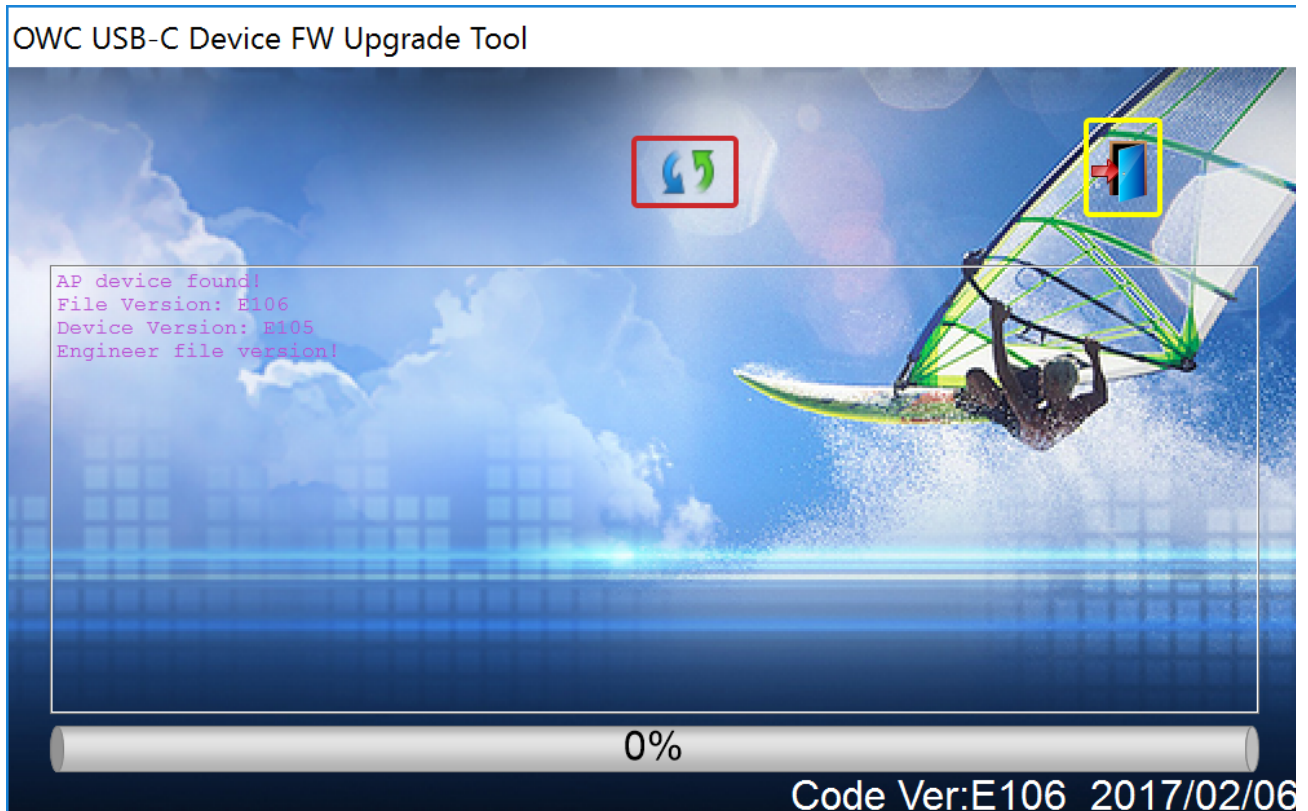

6. Click on the blue-green arrow (highlighted above in red).
7. Once the progress meter reaches 100% and completes the process it will turn green.
8. From this point you can exit the installer by clicking the icon highlighted above in yellow.
9. Disconnect your USB-C Dock from the host computer and from its power source, boot into the Mac's OS, then reconnect the dock.

You can now use your USB-C Dock with your MacBook or MacBookPro as you normally would, including charging functionality.