

**OWC**   
***Mercury Elite Pro***



**OWC Mercury Elite-AL 800 Pro RAID  
Dual Drive FireWire 800/400**

***Assembly Instructions***

## **Table of Contents**

<b>1. Assembling your new OWC Mercury Elite-AL Dual</b>	<b>2</b>
<b>2. Initializing your new OWC Mercury Elite-AL Dual</b>	<b>8</b>
<b>3. Customizing your new OWC Mercury Elite-AL Dual</b>	<b>11</b>
<b>4. Troubleshooting</b>	<b>12</b>
<b>5. Tips</b>	<b>13</b>
<b>6. Contacting Customer Service</b>	<b>14</b>
<b>Important Notes</b>	<b>Back Cover</b>
<b>Warnings</b>	<b>Back Cover</b>

# Assembling your new OWC Mercury Elite-AL Dual

## Chapter 1



Begin by opening your OWC Mercury Elite-AL RAID box.

---



Set the contents out in front of you and familiarize yourself with your new drive enclosure and its components.



Turn the drive enclosure onto it's side as shown and remove the two Phillips screws that are inserted into the bottom of the drive enclosure. This will release the internal drive carrier. Slide the drive carrier out of the external housing, pushing it to the front.



**Basic jumper settings for Western Digital ATA Hard Drives**

Thank you for purchasing your new ATA hard drive from Other World Computing! Please review these jumper settings prior to installing your new hard drive into your computer. You may want to review more detailed information about the installation process, or the location and configuration of your existing internal ATA drive before proceeding. Your manual that came with your computer can be of assistance in both of these determinations.


**A few notes about installing an ATA hard drive into your existing system:**

Your existing drive is normally configured one of two ways, Master (single drive), or Cable Select. You will want to determine this before installing your new drive, the easiest way is to remove the existing drive from your system and visually inspect it's hard drive jumpers. Most hard drives have a schematic either silk screened onto the case of the drive, or the schematic is on a label near the jumper pins. If you have difficulty locating this information, visit the hard drive manufacturer's website.


If your existing hard drive is configured as "Master", then set your new hard drive to "Slave". If your existing drive is set for "Cable Select", then set your new drive to "Cable Select" also. You can change the existing jumper settings on the original drive to suit your needs, but we recommend following these instructions first to verify proper operation of the new hard drive.

Installing jumpers on the new drive is a simple process, follow the schematic to configure your drive.

**Ultra ATA Data Cable Ribbon**




Please note the configuration of the internal ATA cable already installed in your existing system. If your internal cable is configured differently than pictured here, you may want to replace it before installing a new hard drive to achieve maximum performance.

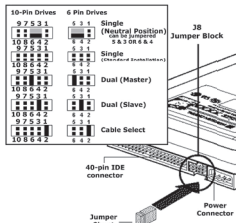

For further assistance, visit our tech center at <http://eshop.macsales.com/Tech/index.cfm>

Take your hard disk drives that you wish to install into the case and determine how to set the configuration jumpers to Master and Slave; you will need one of each for the drives that you install into the enclosure. Shown above is the jumper configuration sheet included with Western Digital drives that ship here at OWC; we have instructions available for all brands we sell at: [http://eshop.macsales.com/tech\\_center/index.cfm?page=data\\_int HDD.html](http://eshop.macsales.com/tech_center/index.cfm?page=data_int HDD.html)

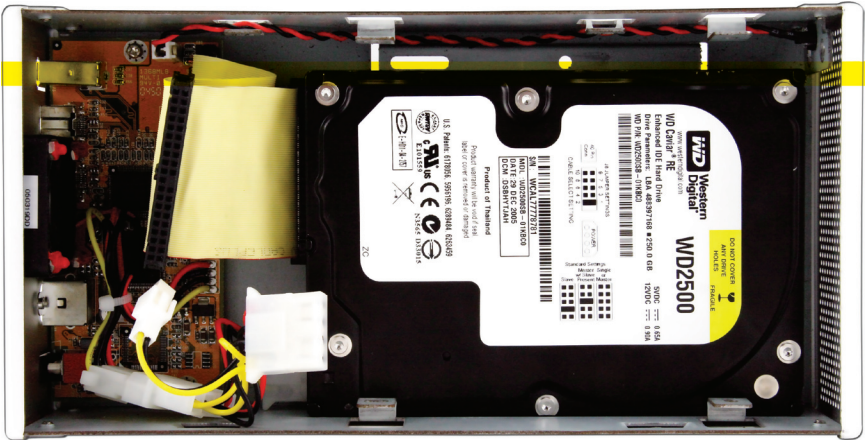


Take the hard drive that you have configured as a MASTER drive and set it into the hard drive enclosure as shown. Plug the IDE cable into the drive (the yellow ribbon cable), and the power cable (the yellow, black and red cable), into the drive.

---



Turn the drive enclosure on it's side so you can access the bottom screws as shown. Install the 4 screws into the hard drive through the drive case.



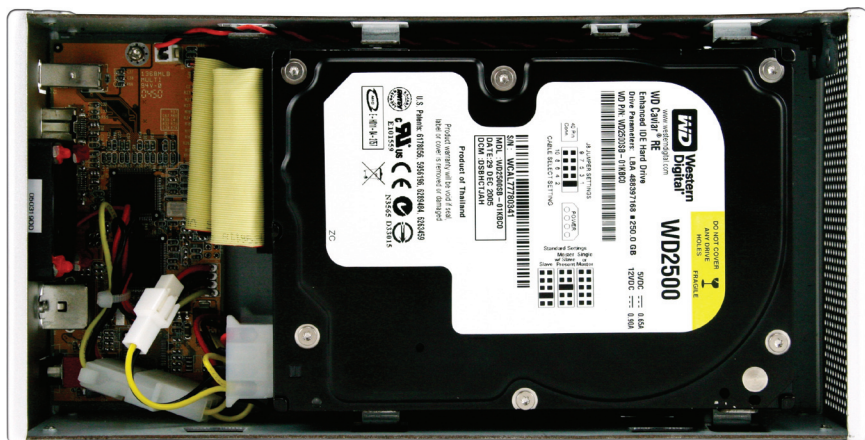

Turn the hard drive enclosure back over and insert the hard drive jumpered as SLAVE. Insert the power and IDE cables into it, as you did with the bottom drive.

---



Turn the drive on it's side, and insert the top screws into the drive as shown.

---



And repeat the procedure on the bottom screws.



Slide the drive enclosure back into the outer shell, port end first into the case with the logo on the outer shell facing you, as shown in the picture.



Turn the unit on it's side and insert the 4 Phillips screws to secure the enclosure to the outer shell.



Turn the drive so you can see the rear ports. Connect the power cable to the back of the drive, and either the FireWire 400 or 800 cable to the drive (whichever you plan on using to connect to your computer). Plug the power brick into the AC power cable (not shown), and power the unit on. You should hear the drives spin up, and click a couple of times. After 10 or so seconds, the following dialog box should appear on your screen.

Continue on to Page 8; Chapter 2 - **Initializing your new OWC Mercury Elite-AL Dual.**



# Initializing your new OWC Mercury Elite-AL Dual

## Chapter 2



### Disk Insertion

The disk you inserted was not readable by this computer.


Initialize...

Ignore


Eject

Click on the “Initialize” button.


---

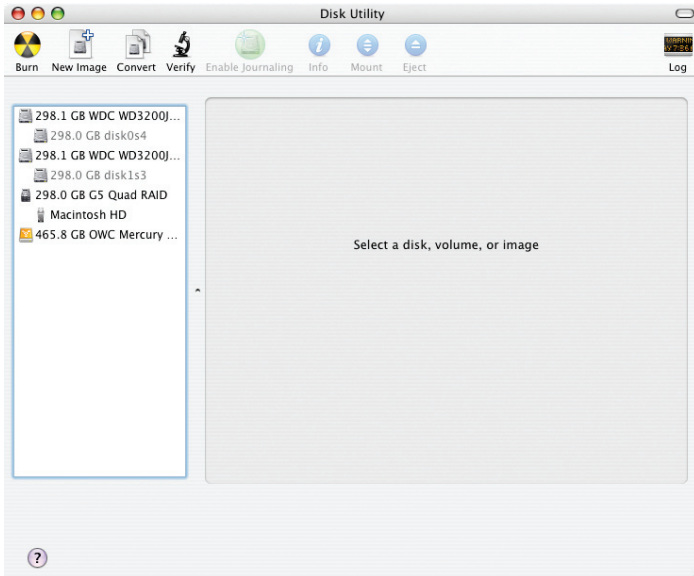

Select the device with no volumes attached to it; in this picture, that would be the 465.8GB OWC Mercury drive. Click once on the picture of the drive icon next to the text.

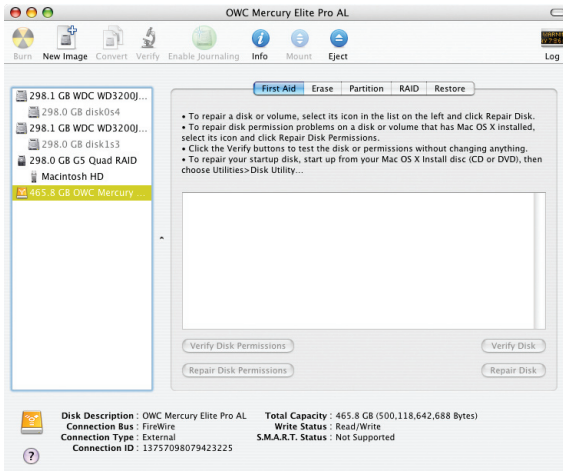

Once you've selected the OWC Mercury drive, you'll notice the above change in the Disk Utility program. Click on the "Erase" tab, next to the highlighted blue "First Aid" tab in this picture.

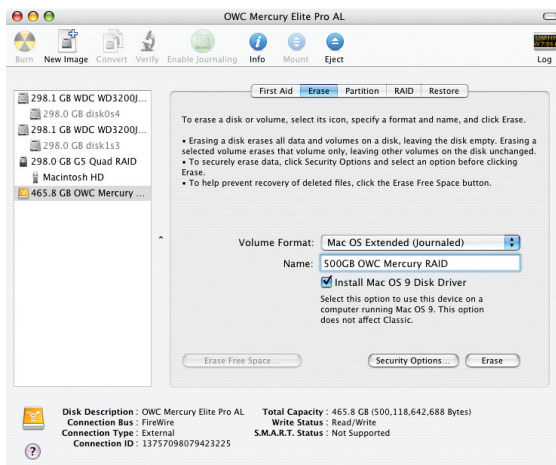

Once on the Erase tab, you need to name the volume you want to format, and erase it. The hard drive case is shipped to you in a 2 drive combined Stripe (RAID 1) setup from the factory. For more options than using the default Striping by setup, see the next chapter. If Striping is acceptable for your setup, then name the volume as you want, choose the Volume format type, (Mac OS Extended (Journaled) is default), and click the Erase button.



## Erase Disk


Erasing a disk will destroy all information on the disk.

Are you sure you wish to erase the disk "500GB OWC Mercury RAID"?

Cancel

Erase

Confirm that you want to erase the volume.

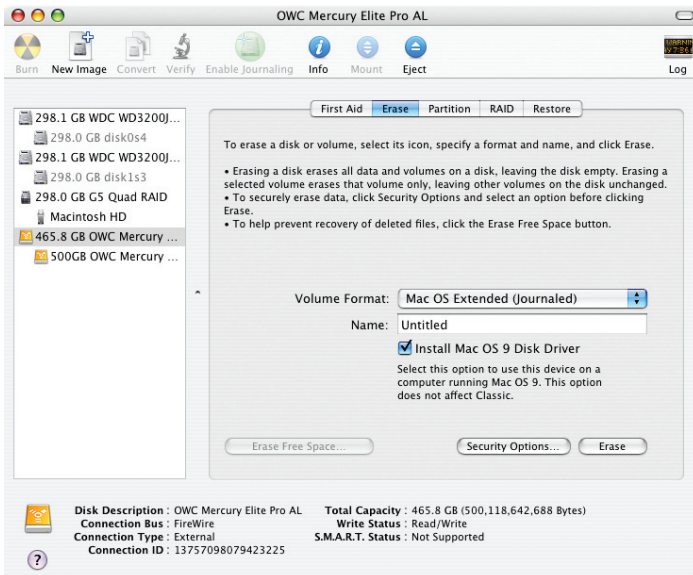

After a few moments, the erase command will complete, and the volume will mount on your desktop. You can quit Disk Utility, and you're all set!

## **Customizing your new OWC Mercury Elite-AL**

### **Chapter 3**

#### **Striping, Spanning, Mirroring, and Single Drive Mode:**

The previous section instructing you on how to format your new OWC Mercury Elite-AL Dual is specifically written to use the drive as it ships from our factory; Striping 2 hard drives together for maximum performance.

However, many customers want more options, and 2 more that are available when using this drive enclosure are mirroring (for data security), and having 2 individual drives mount on the desktop (excellent, if you have a mismatched pair of hard drives you're wanting to utilize).

Detailed instructions on configuring your enclosure with these settings are available here:

[http://eshop.macsales.com/tech\\_center/index.cfm?page=manuals/mercuryfirewire/format/raid/raid.html](http://eshop.macsales.com/tech_center/index.cfm?page=manuals/mercuryfirewire/format/raid/raid.html)

Remember; if you want to change any setting you will need to reinitialize your hard drive and lose any data already on it. Have an adequate backup complete before proceeding!

#### **Drive Icons:**

Now that you have your new OWC Mercury Elite-AL Dual configured to your needs, dress it up! Change the icon of the hard drive! We have created disk icons for every model of drive we make and they are available for download here:

<http://eshop.macsales.com/Reviews/Framework.cfm?page=/icons/icons.html>

## Troubleshooting

### Chapter 4

If your OWC Mercury Elite-AL is not functioning properly, begin by checking some basic possibilities, such as:

- Are all cables tightly attached to the computer and drive?
- Is the power supply plugged in firmly, and is the LED lit on the power supply brick?

If the above solutions are not working, a full reset of your system may be in order.

- Performing a set of open firmware reset routines can result in the memory being properly recognized again. To do this, you will need to boot your machine into Open firmware.

To boot into Open Firmware, shut down your Mac, then start it up while holding down the Command, Option, O and F keys. At the Open Firmware screen prompt, enter the following commands (you may want to write them down on a piece of paper before beginning this process), pressing the return key after each:

reset-nvram (press return)

set-defaults (press return)

reset-all (press return, your machine will reboot)

For further troubleshooting tips, visit our FAQ section online at: [http://eshop.macsales.com/tech\\_center/FAQ/index.cfm](http://eshop.macsales.com/tech_center/FAQ/index.cfm)

If you are still experiencing problems with your drive, please continue on to Chapter 6: Contacting Customer Service.



## **Tips**

### **Chapter 5**

**To disconnect or unhook your OWC Mercury hard drive, follow these important steps to properly dismount your drive.**

If you wish to disconnect your OWC Mercury drive without shutting down your computer, simply drag the OWC Mercury drive icon to the trash can on the desktop (or, in the dock using Mac OS X). Your drive is now safe to power off and unhook.

### **Share your Mac formatted drive with your PC using MacDrive (optional purchase)**

After installing MacDrive, your HFS+ Macintosh volume will mount as if the drive were formatted in a native Windows format. MacDrive allows you to use your OWC Mercury hard drive on either platform without having to reformat or re-initialize the volume. We highly recommend this software for anyone that is sharing data in a cross platform environment.

### **Cloning drives (exact copies)**

If you want to make an exact duplicate of a hard drive, we highly recommend Mike Bombich's donationware "Carbon Copy Cloner". It's a great tool! You can find it on his website at: <http://www.bombich.com/cccl.html>

## Contacting Customer Service

### Chapter 6

#### **Before contacting Customer Service:**

- Read the manuals and review Chapter 5: Troubleshooting
- Try and confirm the problem is with the hard drive. If you have a second Macintosh computer, move the drive to that system and verify that the drive does not function with that machine.
- Visit our tech center for more support suggestions.

**[http://eshop.macsales.com/tech\\_center/index.cfm](http://eshop.macsales.com/tech_center/index.cfm)**

- Also visit our FAQ section, to see what other customers have asked about and how they solved their problem.

**[http://eshop.macsales.com/tech\\_center/FAQ/index.cfm](http://eshop.macsales.com/tech_center/FAQ/index.cfm)**

#### **If you still need support:**

- Have the serial number of the hard drive
  - Your invoice number (if possible)
  - What operating system you are using
  - Which kind of Macintosh you are using
- Available to you to speed your support contact.

#### **Tech Support Hours (Central Standard Time)**

**8AM-9PM Monday - Friday**

**9AM - 4PM Saturday & Sunday**

**Phone (815) 338-8685**

***Live Chat is available during normal business hours as well.***

Visit <http://eshop.macsales.com> for more information.

***Or, you can email:*** Submit your email at:

<http://eshop.macsales.com/Service/Tech.cfm>

## Copyrights

Copyright © 2006 Other World Computing, Inc. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of Other World Computing.

## Changes

The material in this document is for information only and subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, Other World Computing assumes no liability resulting from errors or omissions in this document, or from the use of the information contained herein. Other World Computing reserves the right to make changes or revisions in the product design or the product manual without reservation and without obligation to notify any person of such revisions and changes.

## FCC Statement:

Warning! Modifications not authorized by the manufacturer may void the user's authority to operate this device.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

## Health And Safety Precautions

- Use proper anti-static precautions while performing the installation of your hard drives into this drive enclosure. Failure to do so can cause damage to your drive mechanisms, and / or the hard drive enclosure.
- Read this User's Guide carefully, and follow the correct procedure when setting up the device.
- Do not open your hard drive or attempt to disassemble or modify it. Never insert any metallic object into the drive to avoid any risk of electrical shock, fire, short-circuiting or dangerous emissions. Your hard drive contains no user-serviceable parts. If it appears to be malfunctioning, have it inspected by a qualified Other World Computing Technical Support representative.
- Never expose your device to rain, or use it near water, or in damp or wet conditions. Never place objects containing liquids on the drive, as they may spill into its openings. Doing so increases the risk of electrical shock, short-circuiting, fire or personal injury.

## General Use Precautions:

- Do not expose the hard drive to temperatures outside the range of 5° C to 40° C (41° F to 104° F). Doing so may damage the drive or disfigure its casing. Avoid placing your drive near a source of heat or exposing it to sunlight (even through a window). Inversely, placing your drive in an environment that is too cold or humid may damage the unit.
- Always unplug the hard drive from the electrical outlet if there is a risk of lightning or if it will be unused for an extended period of time. Otherwise, there is an increased risk of electrical shock, short-circuiting or fire.
- Use only the power supply shipped with the device.
- Do not use the hard drive near other electrical appliances such as televisions, radios or speakers. Doing so may cause interference which will adversely affect the operation of the other products.
- Do not place the drive near sources of magnetic interference, such as computer displays, televisions or speakers. Magnetic interference can affect the operation and stability of your hard drive.
- Do not place heavy objects on top of the drive or use excessive force on it.
- Never use excessive force on your drive. If you detect a problem, consult the Troubleshooting section in this manual.
- Protect your hard drive from excessive exposure to dust during use or storage. Dust can build up inside the device, increasing the risk of damage or malfunction.
- Other World Computing recommends the use of normal glass cleaning products to keep the high lustre finish at it's finest with this product. Be sure to not get any moisture inside the holes and if you do, allow time to air dry before use.
- Do not block the ventilation outlets on the rear of the drive. These help to keep your drive cool during operation. Blocking the ventilation outlets may cause damage to your drive and cause an increased risk of short-circuiting or fire.



**OWCMANFW912AL2**