




SOFTRAID XT

Quick Start Guide

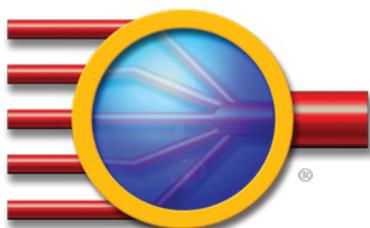

Introduction	1
1.1 Minimum System Requirements	
1.2 Features	
1.3 About This Manual	
Using SoftRAID XT	2
2.1 About Easy Setup	
2.2 Using Easy Setup	
2.3 Initializing, Verifying, and Certifying Disks	
2.3.1 Initializing Disks	
2.3.2 Verifying and Certifying Disks	
2.4 Manually Creating a Volume	
2.5 Configuring Email Notifications	
2.6 Disk Failure, Replacement, and RAID Rebuild	
Support Resources	9
3.1 Troubleshooting	
3.1.1 Storage Device	
3.1.2 SoftRAID	
3.2 About Data Backup	
3.3 Contacting Technical Support	

INTRODUCTION

SoftRAID® XT is a RAID application built for high-performance OWC storage solutions. Currently, SoftRAID XT only runs on Mac host computers (see section 1.1 below for more details). To get optimal performance from your OWC solution, SoftRAID XT should be installed on the host computer. If you purchased a SoftRAID XT solution that includes drives, the drives have been pre-configured to work with the application. If you are using your own drives, you need to initialize them and create one or more RAID volumes. Proceed to Section 2 — Easy Setup for first-time instructions.

1.1 SoftRAID XT Requirements

- Hardware
 - OWC ThunderBay series
 - OWC Mercury Elite Pro Quad
 - OWC ThunderBlade V4
 - Mac with a data port that is compatible with one of the above storage solutions
- Operating System
 - OS X 10.9.3-10.11.6
 - macOS 10.12 or later
 - **Note:** the hardware solutions listed above have different OS requirements

1.2 Features

- RAID levels supported: 0, 1, 1+0, 4, and 5
- Certify disks — writes a pattern to each sector on the disk and then reads it back to ensure that the drive is functioning as designed.
- Verify disks — reads every sector on the disk to ensure it can be read without errors.
- Validate volumes — reads every volume block to ensure it can be read without errors.
- S.M.A.R.T monitoring of all connected drives, including early warning of disk failure.
- Custom email alerts for important disk events.

1.3 About This Manual

The features and user interface shown may vary slightly between this document and the software version purchased. Drivers and functionality may change depending on the software version.

2.1 About Easy Setup

The Easy Setup application is designed to install the latest SoftRAID driver, initialize disks, and set up new RAID volumes. It works with OWC storage solutions that ship with pre-configured drives, or with user-installed drives.

2.2 Using Easy Setup

1. If necessary install the drives using the documentation that ships with your OWC storage solution.
2. Connect the device to a power outlet. If your storage device has a power switch, you must also set that to the ON position.
3. Connect the appropriate data cable between the device and the computer. This step is required for a ThunderBay series device to power on.
4. If the device was pre-configured, the default volume will be available immediately and can be used.
5. If the device includes drives, the SoftRAID Easy Setup application is included on the volume. For units without drives, visit softraid.com/softraidxt to download the software. The serial number is on the bottom of the device.
6. Find the item called 'ThunderBay,' 'ThunderBlade V4,' or 'Mercury Elite Pro Quad' on your Desktop or in the Finder, and then open it. In the new window find the 'SoftRAID XT' folder and copy it to your local Applications folder.
7. Launch the SoftRAID Easy Setup item. You will be prompted to update the default SoftRAID driver that ships with the Mac operating system. Click Update, enter your administrator password, then restart the computer when prompted.
8. Relaunch SoftRAID Easy Setup. When the Welcome screen appears, click Continue. Then, when prompted, enter the 25-digit SoftRAID serial number — located on the bottom of the device — and click OK. You may be asked to enter your administrator password again afterward.
9. Review the license terms and if you agree, accept the License Agreement.
10. On the Select Disks screen, OWC solutions with pre-existing volumes initially provide the option to keep the volume (if applicable click the Quit button), or create a new RAID volume (if applicable click the Continue button).

NOTE: The type of RAID volume you have depends on the device model. For a better understanding of each RAID mode and its benefits, please visit www.softraid.com/pages/features/raid_levels.html

- From the pop-up menu on the Select Disks screen, choose to show all available disks or available disks that are empty. Next, select the disks to include then click Continue.

Select Disks

- Configure Setup
- Confirm Settings
- Initialize RAID System
- Finish

Select disks for your RAID system: Show Only Empty ThunderBay Disks

In the list below, check 2 or more disks (up to 16). These will be used to create your RAID volume.

Empty ThunderBay Disks: (Disks shown have no saved user files or data)

- disk4, 240.05 GB SATA - OWC Mercury Electra 6G SSD (Thunderbolt)**
Volumes on this disk: None
- disk2, 240.05 GB SATA - OWC Mercury Electra 6G SSD (Thunderbolt)**
Volumes on this disk: None
- disk3, 240.05 GB SATA - OWC Mercury Electra 6G SSD (Thunderbolt)**
Volumes on this disk: None
- disk1, 240.05 GB SATA - OWC Mercury Electra 6G SSD (Thunderbolt)**
Volumes on this disk: None

Click any disk to blink its disk light

Selected Disks: 4 (960.22 GB)

- The Configure Setup screen provides RAID volume options. Choose a RAID mode as needed, then name the volume, select the Work Use scenario, and the RAID Level. When finished click Continue. **NOTES:** If the drives have data on them, you will be given the option of moving that data prior to the next step. The screenshot below shows the '1 Volume RAID' setup. An example of a '2 Volume RAID' setup is on page 4. For 2 volume setups, it is best to use physical disks not partitions.

Configure Setup

- Select Disks
- Confirm Settings
- Initialize RAID System
- Finish

How would you like to set up your RAID system?

How many volumes would you like: Easy: Setup 1 Volume RAID

Configure your RAID volume in 3 easy steps:

- Select a name for your volume:** RAID 4 SSDs
- Select a Work Use for your volume:** Digital Video
- Select a RAID Level for your volume:** RAID Level 4 - Recommended

SoftRAID RAID 4 volumes give you very high performance while still protecting your volume from disk failure. RAID 4 differs from RAID 5 by dedicating an entire disk to 'parity' data. RAID 5 distributes its 'parity' data across all disks. SSDs will take advantage of the dedicated parity disk and write performance can increase up to 20% faster than a RAID 5 volume on SSDs. NOTE: RAID Level 4 volumes require 25% of the total disk space for disk failure protection.

Selection Result:

RAID 4 960.22 GB Total Disk Space

RAID Level 4 Protection (-240.05 GB)

719.11 GB RAID 4 SSDs

● Select Disks

● **Configure Setup**

● Confirm Settings

● Initialize RAID System

● Finish




How would you like to set up your RAID system?

How many volumes would you like: Advanced: Setup 2 Volume RAID

Create two autonomous RAID volumes on your selected disks. Each RAID volume may be a different RAID level and/or size from the other.

Configure Volume Settings: RAID Volume 1 RAID Volume 2

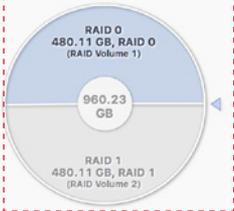

Select a volume name:

Select a Work Use for this volume:
Digital Video

Select a RAID Level for this volume:
Stripe (RAID Level 0)

Volume 1 Total Disk Space Used: 480.11 GB, 50.00%

Selection Result:

- 
RAID 0
 480.11 GB
 Volume 1 Disk Space




None
 No Failure Protection




 479.13 GB
 RAID 0
- 
RAID 1
 480.11 GB, RAID 1
 Volume 2 Disk Space




 (~360.08 GB)
 RAID Level 1 Protection




 119.78 GB
 RAID 1

13. Review the volume settings and decide if you want to use Safeguard; this prevents deleting or overwriting a RAID volume in SoftRAID XT. Safeguard does not prevent a volume from being deleted with Disk Utility. If you would like to make changes to other settings, click the Previous button, otherwise click Setup.

● Select Disks

● Configure Setup

● **Confirm Settings**

● Initialize RAID System

● Finish



Before continuing, please review your new RAID volume settings.

If needed, click 'Previous' to go back and make changes.

RAID Volume Options:


Enable volume safeguard for new RAID volumes (Recommended) ?

Configuration:

Disks Used:	New RAID Volumes:
<div style="display: flex; flex-direction: column; gap: 5px;"> <div style="display: flex; align-items: center;">  <div style="margin-left: 5px;"> disk4, 240.05 GB SATA OWC Mercury Electra 6G SSD (Thunder...) </div> </div> <div style="display: flex; align-items: center;">  <div style="margin-left: 5px;"> disk2, 240.05 GB SATA OWC Mercury Electra 6G SSD (Thunder...) </div> </div> <div style="display: flex; align-items: center;">  <div style="margin-left: 5px;"> disk3, 240.05 GB SATA OWC Mercury Electra 6G SSD (Thunder...) </div> </div> <div style="display: flex; align-items: center;">  <div style="margin-left: 5px;"> disk1, 240.05 GB SATA OWC Mercury Electra 6G SSD (Thunder...) </div> </div> </div>	<div style="display: flex; align-items: center; justify-content: center; gap: 10px;">  <div style="margin-left: 5px;"> 719.11 GB, RAID 4 SSDs RAID Level 4, Digital Video Total Space Used: 960.22 GB </div> </div>

Please verify that the 'Disks Used' above are correct, then click 'Setup'.

14. A progress screen will appear as the RAID volume is built.

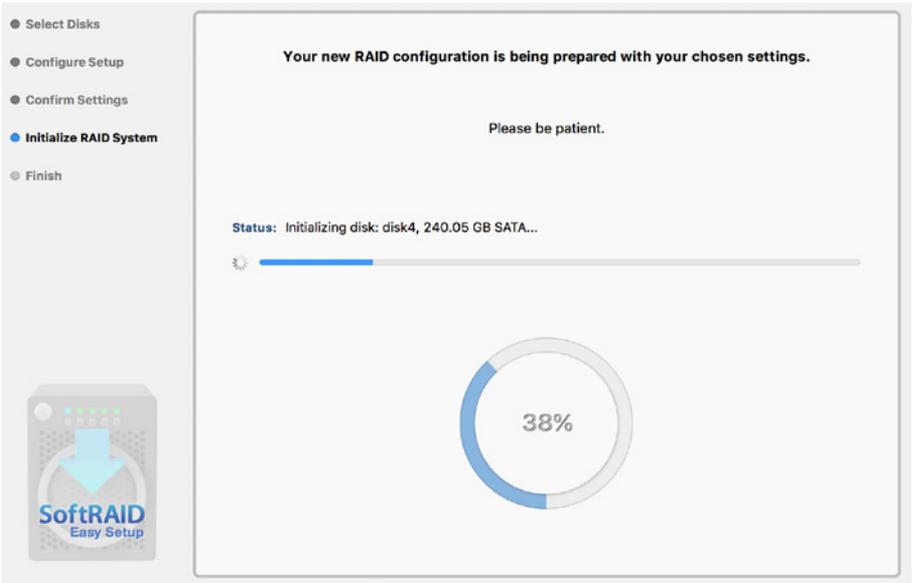

15. The new RAID volume is now ready for use. Click Open Volume to begin using the new volume right away, or click Quit. In either case the Easy Setup window will close.


2.3 Initializing, Verifying, and Certifying Disks

If you are using your own disks, you will need to initialize them in SoftRAID before they can be used. If you are using a device that has already been configured in SoftRAID XT, you can proceed to **Section 3.2**.

2.3.1 Initializing Disks

When using your own disks, please follow these steps to initialize the disks.

1. Launch SoftRAID XT. In the main window select all disks that need to be initialized (Shift-click to select multiple disks).
2. Right-click on one of the selected disks to access the 'Disk' menu, then select the Initialize option, as shown below.

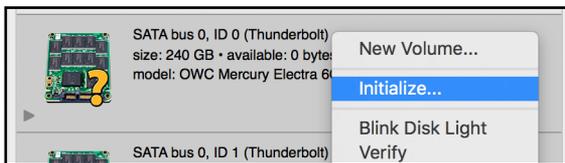

3. When prompted, confirm that you wish to initialize the disks. **Initializing a disk will destroy all data on the disks; before proceeding make sure your data is backed up!**

2.3.2 Verifying and Certifying Disks


SoftRAID XT has two features that can test a disk to confirm that it is healthy: Verify and Certify. Both features can be accessed by right-clicking the disk that you wish to scan, then choosing the appropriate option.

- Verify reads each disk sector to determine if any of them are unreadable.
- Certify writes a pattern of data to each sector of the disk and then reads the sector to make sure the pattern has not changed. **Note: 'Certify' is a destructive process, so before proceeding make sure there is no important data on the disk.** Note also that. Both 'Verify' and 'Certify' can take multiple hours to complete.


2.4 Creating a Volume

To create a new volume in SoftRAID XT, follow these steps:

1. Select the disks that you want to be members of the new volume, then right-click on one of the disks to open the Disk menu. Select New Volume.

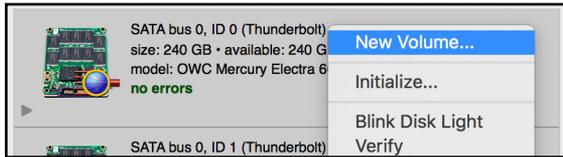

2. The New Volume screen appears and the LEDs for the selected disks will blink on the ThunderBay. **IMPORTANT:** the listing of disks in SoftRAID XT does not necessarily reflect the order of disks inside the device. Give the new volume a name then select the Volume Type, File System type, Optimization settings, Volume Safeguard and Volume size. When ready, click the Create button. **NOTE:** for RAID 0 verify the 'Stripe Unit Size' — use the suggested value for your optimization type and Click OK.

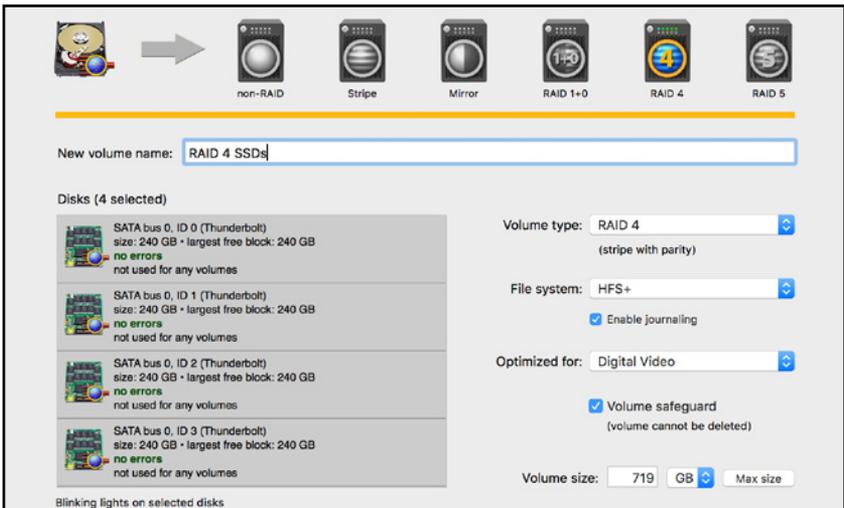

2.5 Configuring Email Notifications

SoftRAID has the ability to send email notifications when specified events occur. To configure email notifications, follow these steps:

1. From the main menu click 'SoftRAID' then choose 'Email Notification...'
2. In the 'Sender Info' tab, enter the full name and email address that you want to use when SoftRAID sends out email notifications. Note that this information does not need to match a real email address. It can be anything you like, and is simply there to identify the email as being sent by SoftRAID.
3. In the 'Outgoing Server' tab, enter the information for the server, user name, and password that will be used to send the email messages. The 'Configure For' drop-down menu will help fill in the server information for common email services like Gmail. There is an option to configure an alternate SMTP server as a backup, but it is not necessary.
4. The next two tabs, 'Notifying Events' and 'Alarms', contain checkboxes that allow you to customize what will cause SoftRAID to send out an email notification. 'Notifying Events' contains hardware problems such as disk I/O errors. 'Alarms' lets you set optional thresholds for things like a disk becoming too full or abnormally high CPU load.
5. The last tab, 'Recipients', lets you set one or more destination addresses.


2.6 Disk Failure, Replacement, and RAID Rebuild

When there are problems with a disk, the RAID volume displays a degraded state.




To replace the failed disk and rebuild the RAID volume, follow these steps:

1. Identify the disk by right-clicking its tile, then select 'Blink Disk Light' (shown below). Look at the front of the device and remove the disk with the blinking light.

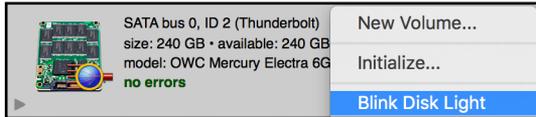


2. Remove the failed disk (not applicable to ThunderBlade V4) then replace it according to the instructions in the Assembly Manual & User Guide. When a new disk is inserted, Disk Utility will ask you what to do with the new disk. Click Ignore and return to SoftRAID XT.

3. If the disk is brand new it will show up in SoftRAID XT with a question mark icon (see below). If the disk has already been formatted in Disk Utility it will appear with an Apple icon. A new disk needs to be initialized in SoftRAID XT before it can be added to the RAID volume (see Section 2.3.1).

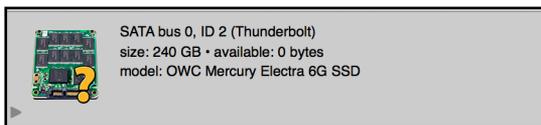

4. Once the new disk is initialized, right-click on the degraded RAID volume and select Add Disk. A new dialog will appear; click on the new disk to select it then click Add. Click Add a second time to confirm the selection and begin the rebuild.

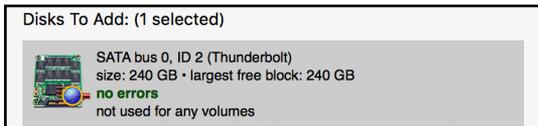

5. The rebuild process will begin automatically as soon as you confirm the addition of the new disk to the RAID volume. Note that the disk tile shows the predicted time remaining to rebuild the volume, as well as a progress meter on the volume icon.



You can use the RAID volume during the rebuild process. Make sure the computer is not powered off or put into sleep mode, and keep the ThunderBay turned on and connected to the computer during this process, or the rebuild will be interrupted.

3.1 Troubleshooting

3.1.1 Storage Device

Start by verifying that the power cable is connected to your OWC storage solution and to a power source. If the power cable is connected to a power strip, make sure that the power switch on the strip is turned on. Then, verify that both ends of the data cable are properly plugged into the computer and the storage device. If the device is still not working properly, try connecting to another computer or using another data cable.

Important: the ThunderBay series of storage solutions require an active data signal to remain in a powered on state. If it is disconnected from the computer, or if the computer powers down or goes into sleep mode, the ThunderBay will go to sleep.

3.1.2 SoftRAID

First make sure that you are using the latest version of SoftRAID. With the application running, go to the 'SoftRAID' menu and select 'Check For Updates...'. If a new version of SoftRAID is available, you will be prompted to download it. For more information on SoftRAID, please review the help files accessible via the SoftRAID 'Help' menu.

3.2 About Data Backup

To ensure that your files are protected and to prevent data loss, we strongly suggest that you keep two copies of your data: one copy on your OWC storage solution, and a second copy on either your internal drive or another storage medium, such as an optical backup, or on another external storage unit. Any data loss or corruption while using the OWC storage solution with SoftRAID is the sole responsibility of the user, and under no circumstances may OWC, its parent, partners, affiliates, officers, employees, or agents be held liable for loss of the use of data including compensation of any kind or recovery of the data.

3.3 Contacting Technical Support



Phone: M–F, 8am–5pm Central Time
(866) 692-7100 (N. America) | +1 (815) 338-4751 (Int'l)



Chat: M–F, 8am–8pm Central Time
www.owcdigital.com/support



Email: Answered within 48 hours
www.owcdigital.com/support

Changes:

The material in this document is for information purposes only and subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, OWC, its parent, partners, affiliates, officers, employees, and agents assume no liability resulting from errors or omissions in this document, or from the use of the information contained herein. OWC reserves the right to make changes or revisions in the product design or the product manual without reservation and without obligation to notify any person of such revisions and changes.

FCC Statement (ThunderBay):

Warning! Modifications not authorized by the manufacturer may void the user's authority to operate this device.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Health And Safety Precautions (ThunderBay):

- Read this user guide carefully and follow the correct procedures when setting up the device.
- Use proper anti-static precautions while performing the installation of your hard drives into this drive enclosure. Failure to do so can cause damage to your drive mechanisms and/or the hard drive enclosure.
- Do not attempt to modify the device. To avoid any risk of electrical shock, fire, short-circuiting or dangerous emissions, never insert any metallic object into the device. If it appears to be malfunctioning, contact technical support.
- Never expose your device to rain, or use it near water or in damp or wet conditions. Never place objects containing liquids on the drive, as they may spill into its openings. Doing so increases the risk of electrical shock, short-circuiting, fire or personal injury.

General Use Precautions (ThunderBay):

- To avoid damage, do not expose the device to temperatures outside the range of 5° C to 40° C (41° F to 104° F).
- Always unplug the device from the electrical outlet if there is a risk of lightning or if it will be unused for an extended period of time. Otherwise, there is an increased risk of electrical shock, short-circuiting or fire.
- Do not use the device near other electrical appliances such as televisions, radios or speakers. Doing so may cause interference which will adversely affect the operation of the other products.
- Do not place the device near sources of magnetic interference, such as computer displays, televisions or speakers. Magnetic interference can affect the operation and stability of hard drives.
- Do not place objects on top of the device.
- Protect your device from excessive exposure to dust during use or storage. Dust can build up inside the device, increasing the risk of damage or malfunction.
- Do not block any ventilation openings on the device. These help to keep the device cool during operation. Blocking the ventilation openings may cause damage to the device and cause an increased risk of short-circuiting or fire.

Copyrights and Trademarks:

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of OWC.

© 2018 Other World Computing, Inc. All rights reserved.

OWC, the OWC logo, and ThunderBay are trademarks of New Concepts Development Corporation, registered in the U.S. and/or other countries. Mac, macOS, and OS X are trademarks of Apple Inc., registered in the U.S. and other countries. Thunderbolt and the Thunderbolt logo are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. Windows is a registered trademark of Microsoft Corporation in the U.S. and other countries. Other marks may be the trademark or registered trademark property of their owners.

